



elster

Газэлектроника

© 2012 « »

Co

1		5
1.1	5
2		6
	-	
2.1	LIS100	7
2.2	LIS200	7
2.3	260 270	9
3		9
3.1	" "	10
3.2	" "	10
3.3	" HyperTerminal "	11
3.3.1	" HyperTerminal "	12
3.3.2	14
3.3.2.1	LIS100.....	15
3.3.2.2	LIS200.....	15
3.3.2.3	16
3.3.2.4	17
3.3.2.5	LIS200	17
3.3.2.6	LIS100	18
3.3.2.7	LIS200 TC215.....	18
4		18
4.1	IDC 2814 IDC5614	18
4.2	GSM	19
4.3	20
4.4	21
5		21
5.1	LIS200	21
5.1.1	Siemens	21
5.1.1.1	22
5.1.1.2	22
5.1.1.3	22
5.1.1.4	23
5.1.1.5	25
5.1.1.6	27
5.1.2	Wavecom	28
5.1.2.1	28

5.1.2.2	29
5.1.2.3	29
5.1.2.4	30
5.1.2.5	32
5.1.2.6	34
5.2	35
5.2.1	35
5.2.1.1	36
5.2.1.2	36
5.2.1.3	36
5.2.1.4	42
5.2.1.5	44
5.2.1.6	46
5.2.2	Siemens	47
5.2.2.1	47
5.2.2.2	47
5.2.2.3	47
5.2.2.4	48
5.2.2.5	50
5.2.2.6	52
5.2.3	Wavecom	52
5.2.3.1	52
5.2.3.2	53
5.2.3.3	53
5.2.3.4	54
5.2.3.5	56
5.2.3.6	57

1

1.1

LIS200

LIS100

2

ELSTER GmbH: LIS100 LIS200.
 : EK-88, EK-87, TC-90.
 LIS100 , 260, 270, 210, 220 215,
 LIS200.

	LIS100	LIS200
	RS232, Rx, Tx, RTS, CTS,	RS232, Tx, Rx, RTS, CTS, Ri RS485(4 T+, T-, R+, R-)
	DS100()	61107-2001
	N,8,1	E,7,1 ,7,1 N,8,1
	4800 / ,	300 19200 / ,
	/	
	/ ,	
		()

2.1 LIS100

, -LIS100.
 ;
 ;
 1. ;
 2. DCD() ;
 3. DTR ());
 4. DSR ()
 ;
 5. " "());
 6.
 5 .

2.2 LIS200

260, 270
 ():

()	2	
LIS200	2 7 (GSM)	Rx, Tx, RS, CS, Ri GND.
	3	Rx, Tx, GND.

()	2	
	5	Rx, Tx, GND. . .

```

:
:
" " " "
'
:

```

LIS200:

```

1. " " ;
2. DCD ( ) ;
3. DTR ( ) ,
DTR On;
4. ;
5. DSR ( ) ;
6. " "(
).
:

```

```

1. " " ;
2. ;
3. ;
4. DTR (
);
5. DSR ( ) ;
6. ;
7. " "(
).
:

```

```

1. " " ;
2. DTR (
);

```


- 3. ;
- 4.
- 5. ; " "().

215, 220

():

LIS-200 TC215:

- 6. " " ;
- 7. DTR ();
- 8. ;
- 9.
- 10. " "();
- 11. DSR () .

2.3

260 270
260 270

260 270 " "

	LIS200		
2	7	3	5
2	19200	19200	19200
2	0	0	0
2	1	1 2 (-02/ FE260)	1 2 (-02/ FE260)
	1	1	

3-5

3

HyperTerminal

Windows.

3.1

- 1.
- 2.
- 3.
- 4.
- 5.
- 6.
- 7.
- 8.
- 9.
- 10.
- 11.
- 12.
- 13.

3.2

LIS 100 (DS-100/x, EK-8x, EK-90, TC-90) -

[LIS100](#)

LIS 200 (DL2x0, EK2x0, ELM204) -

[LIS 200](#)

(Receive Data) (" TXD (Transmit Data) RXD")

" " ;

" " - , " " ;

" " ;

LIS 100 - [LIS 100](#) () , ;

LIS 200 - [LIS 200](#) ; ,

" " - , " " ;

" " ;

LIS200.

3.3

" HyperTerminal "

),

(.

Windows. HyperTerminal


- 1.
 2. () () .
 - 3.
 4. () .
 5. HyperTerminal
 6. [at] Enter.
 7. [],
 8. Enter.
 9. HyperTerminal.
- (,

3.3.1

" HyperTerminal "

HyperTerminal


1. ;
2. ASCII ;

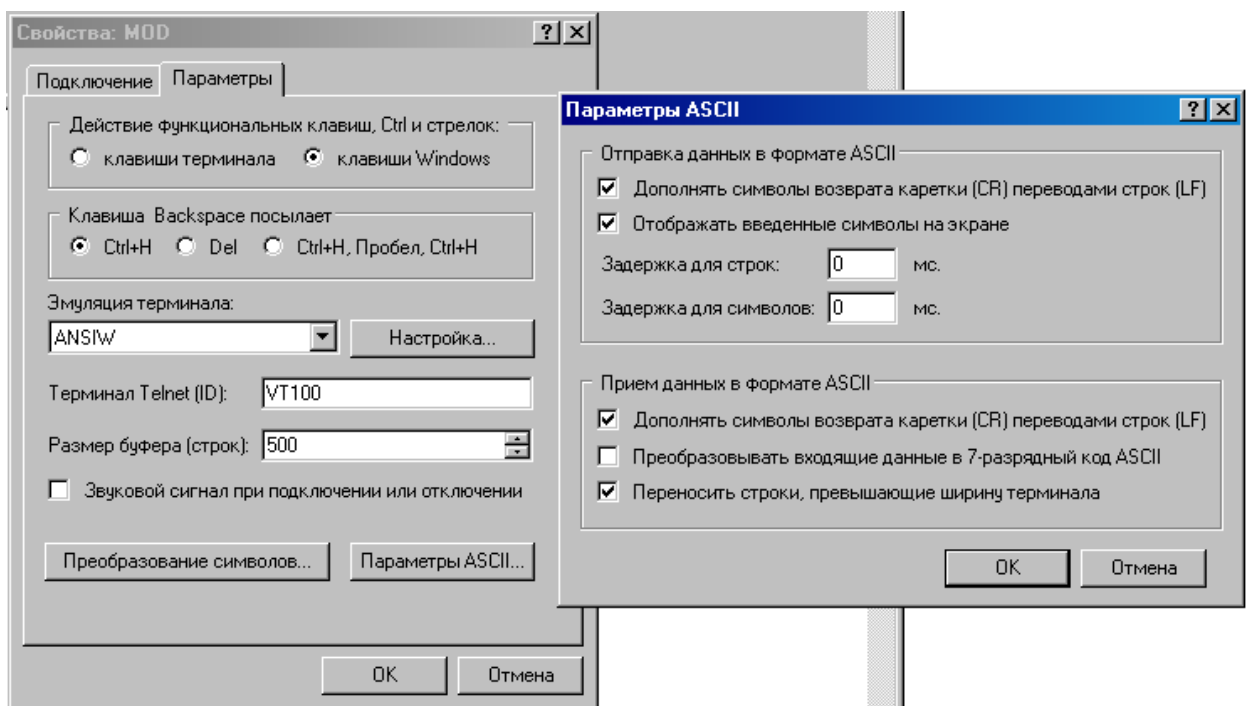

3. (,
 4.);
- " , "

“ ”

	LIS100	LIS200
(/)	4800	19200
	8	7
	(None)	(Even)
	1	1

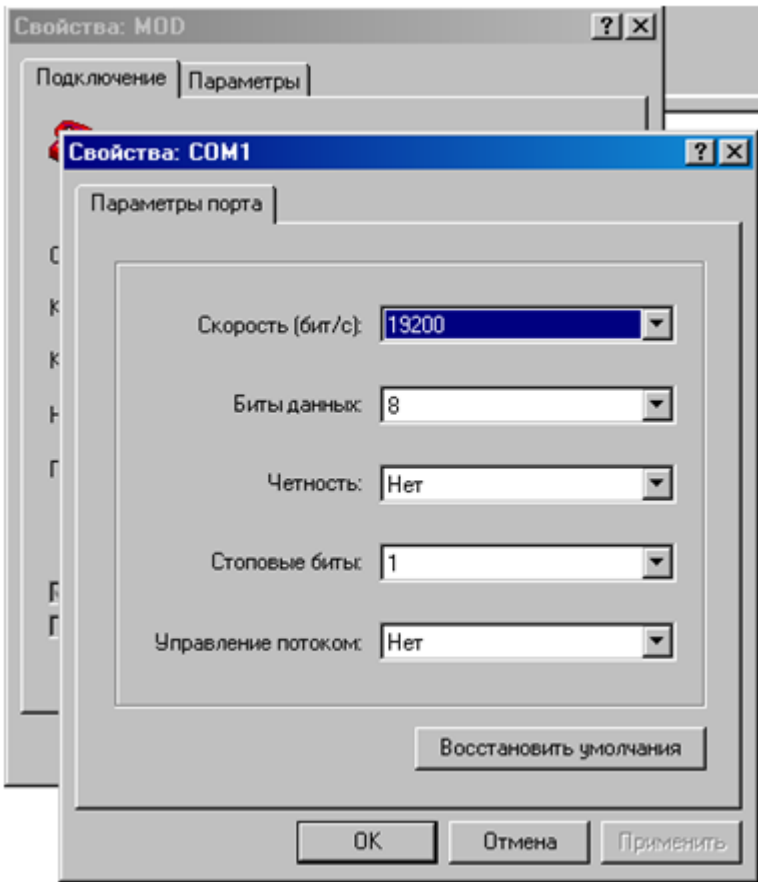

3.3.2

AT-

1. AT () A).

2. AT- (AT at, At).

3. <Enter>. 40

4. AT- AT- (. .) AT- AT).

<BackSpace> (“ ”)

AT.

40 40- D () , 39 (,) <Enter>. AT, D

D

Enter.

at.

_____ :&f e0
:
at&f[Enter]ate0[Enter]

3.3.2.1

LIS100

INPRO IDC-2814

&f2 &c1 &d0 &s1 s0=1 s2=0 s30=30 q1 &y0 &w0

INPRO IDC-5614

&f2 &c1 &d0 &s1 s0=1 s2=0 s30=30 q1 &y0 &w0

ACORP Sprinter@56K

&f &c1 &d0 &s1 s0=1 s2=0 s30=30 &y0 q1 &w0

U.S.Robotics Sportster 56K

&f0 e0 y0 &b1 &c1 &d0 &s1 s0=1 s2=0 &n10 &u4 q1 &w0

ZyXEL OMNI 56K Mini

&f e0 &c1 &d0 &s1 s0=1 s2=0q1&w0 z0

Siemens M20

&f e0 +cbst=7,0,1 +ifc=0,0 &c1 &d0 &s1 s0=1 s2=0 +ipr=4800 &w0

Siemens TC35

&f e0 \q0 &c1 &d0 &s1 s0=1 +cbst=7,0,1 +ipr=4800 &w0

Siemens MC35i, Cinterion MC52i, IRZ MC52i,Cinterion MC35i

&f e0 &c1 &d0 &s1 s0=1 \q0 +cbst=7,0,1 +ipr=4800 &w0

Wavecom Fastrack, Wavecom FASTRACK SUPREME, Fargo Maestro 100

&f e0 +cbst=7,0,1 +ifc=0,0 &c1 &d0 &s1 s0=1 +ipr=4800 &w q1 &w

3.3.2.2

LIS200

INPRO IDC-2814

&f2 e0 &c1 &d2 &k0 &s0 s0=0 s30=30 &y0 &w0

INPRO IDC-5614

&f2 e0 &c1 &d2 &k0 &s0 s0=0 s30=30 &y0 &w0

ACORP Sprinter@56K

&f e0 &c1 &d2 &k0 &s0 s0=0 s30=30 &y0 &w0

U.S.Robotics Sportster 56K

&f0 e0 q0 y0 v1 &b1 &c1 &d2 &s0 &k1 &m4 &n10 s0=0 &w0

ZyXEL OMNI 56K Mini

&f e0 &c1 &d2 &s0 s0=0 &w0 z0

Siemens M20

&f e0 &c1 &d2 s0=0 +cbst=7,0,1 +ifc=0,0 +icf=5,1 &w0

Siemens TC35

&f e0 &c1 &d2 s0=0 \q0 +cbst=7,0,1 +ipr=0 &w0

Wavecom Fastrack, Wavecom FASTRACK SUPREME, Fargo Maestro 100

&f e0 +ifc=0,0 &c1 &d2 s0=0 +cbst=7,0,1 +ipr=19200 +icf=5,1 &w

Insys HS14

&f e0 s0=0 &c1 &d2 &k0 &s0 s30=15 &y0 &w0

Insys Onbit

&f e0 s0=0 &c1 &d2 &k0 &s0 s30=15 &y0 &w0

Microlink 56K

&f e0 s0=0 &c1 &d2 s30=15 +ifc=0,0 &y0 *w0

Genius GM56E-V

&f e0 &c1 &d2 &k0 &s1 s0=0 s30=30 &y0 &w0

Siemens MC35i, Cinterion MC52i, IRZ MC52i, Cinterion MC35i

at&f ate0 at&c1 at&d2 ats0=0 at\q0 at+cbst=7,0,1 at+ipr=19200 at&w0

3.3.2.3**INPRO IDC-2814**

&f2 e0 q0 v1 &d0 &s1 &k0 s0=0 s30=30 &y0 &w0

INPRO IDC-5614

&f2 e0 q0 v1 &d0 &s1 &k0 s0=0 s30=30 &y0 &w0

ACORP Sprinter@56K

&f e0 v1 &d0 &s1 &k0 s0=0 s30=30 &y0 | q0 &w0

U.S.Robotics Sportster 56K

&f0 e0 q0 y0 v1 &b1 &c1 &d0 &s1 s0=0 &k1 &m4 &n10 &w0

ZyXEL OMNI 56K Mini

&f e0 q0 v1 &d0 &s1 s0=0 &w0 z0

Siemens M20

&f e0 q0 v1 &d0 &s1 s0=0 +cbst=7,0,1 +ifc=0,0 +icf=5,1 &w0

Siemens TC35

&f e0 q0 v1 &d0 &s1 s0=0 +cbst=7,0,1 +ipr=0 \q0 | &w0

Wavecom Fastrack, Wavecom FASTRACK SUPREME, Fargo Maestro 100

&f e0 +ifc=0,0 &d0 &s1 s0=0 +cbst=7,0,1 +ipr=19200 +icf=5,1 &w

Elsa Microlink 56K

&f e0 q0 v1 &d0 &s1 s0=0 s30=15 +ifc=0,0 &y0 *w0

Siemens MC35i, Cinterion MC52i, IRZ MC52i,Cinterion MC35i

at&f ate0 atq0 atv1 at&d0 at&s1 ats0=0 at+cbst=7,0,1 +ipr=19200 at\q0
at&w0

3.3.2.4

INPRO IDC-2814

&f2 &d0 q1 e0 &k0 s0=1 &y0 &w0

INPRO IDC-5614

&f2 &d0 q1 e0 &k0 s0=1 &y0 &w0

ACORP Sprinter@56K

&f &d0 q1 e0 &k0 s0=1 &y0 &w0

U.S.Robotics Sportster 56K

&f0 e0 y0 &b1 &c1 &d0 &s1 s0=1 &k0 &n10 q1 &w0

ZyXEL OMNI 56K Mini

&f e 0q1 &d0 &s0 &k0 s0=1 &w0 z0

Siemens TC35

&f &c1 &d0 &s1 s0=1 \q0 +cbst=7,0,1 +ipr=0 &w0

Wavecom Fastrack, Wavecom FASTRACK SUPREME, Fargo Maestro 100

&f e0 +ifc=0,0 +wrst=1 "024:00" &s1 &c1 &d0 s0=1 +cbst=7,0,1 +ipr=19200
+icf=3,4 &w

Siemens MC35i, Cinterion MC52i, IRZ MC52i,Cinterion MC35i

at&f ate0 atq0 atv1 at&d0 at&s1 ats0=1 at+cbst=7,0,1 at+ipr=19200 at\q0
at&w0

3.3.2.5 LIS200

LIS200 (

LIS200)

INPRO IDC-2814

&f2 e0 &c1 &d2 &k0 &s1 s0=0 &l1 s15=7 &y0 &w0

INPRO IDC-5614

&f2 e0 &c1 &d2 &k0 &s1 s0=0 &l1 s15=7 &y0 &w0

(

LIS200)**INPRO IDC-2814**

&f &d0 &k0 s0=1 &l1 s15=7 &y0 &w0

INPRO IDC-5614

&f &d0 &k0 s0=1 &l1 s15=7 &y0 &w0

3.3.2.6 LIS100

LIS100 (**LIS100)****INPRO IDC-2814**

&f &l1 s15=7 &y0 &w0

INPRO IDC-5614

&f &l1 s15=7 &y0 &w0

3.3.2.7 LIS200 TC215

INPRO IDC-5614

&f2 e0 &k0 &c1 &d0 &s1 s0=1 s2=0 s30=30 q1 &y0 &w0

Microlink 56k

&f e0 &c1 &d0 &s1 \d3 +ifc=0,0 q2 s0=1 s2=0 \t30 &y0 *w0

Siemens M20T

&f e0 &c1 &d0 &s1 s0=1 s2=0 s30=30 +ipr=9600 &w0

Siemens, Cinterion, IRZ MC35i

&f e0 &c1 q0 v1 &d0 &s1 s0=1 +cbst=7,0,1 +ipr=9600 \q0 &w0

Wavecom Fastrack, Wavecom FASTRACK SUPREME, Fargo Maestro 100

&f e0 +ifc=0,0 &d0 &s1 s0=1 +cbst=7,0,1 +ipr=9600 +icf=3,4 &w

4**4.1 IDC 2814 IDC5614**

() ,

, . , :

e0 &l1 s15=5 x1.

«^».

4.2 GSM

GSM

PIN

PIN

Siemens TC35.
HyperTerminal

at+cpin?	PIN ?
+CPIN: SIM PIN	PIN SIM
at^spic	PIN
^SPIC:3	3
at+cpin="8481"	PIN (SIM)
at+clck="SC",2	PIN1
+CLCK:1	
at+clck="SC",0,"8481"	PIN1 (SIM)
at+clck="SC",2	PIN1
+CLCK:1	

Enter.

GSM

PIN

GSM , SIM , GSM
 260, ,
 GSM ,

4.3

AT ,

	?	, 5.5 32 .
	RS232 ?	
	?	,
	?	, ,
,	PC?	.
	,()?	.

4.4

«ERROR», AT

«ERROR» (AT	.
)	ATAT	,

(«NO CARRIER»),

«NO CARRIER» (GSM	?
)		?
		?

5

- 1.
- 2.
- 3.
- 4.
- 5.


5.1 LIS200

5.1.1 Siemens

Siemens
 Siemens MC35i, Cinterion MC52i, IRZ MC52i, Cinterion
 MC35i.

5.1.1.1

EK270 RS232 (Siemens MC35i,
Cinterion MC52i, IRZ MC52i, Cinterion MC35i)

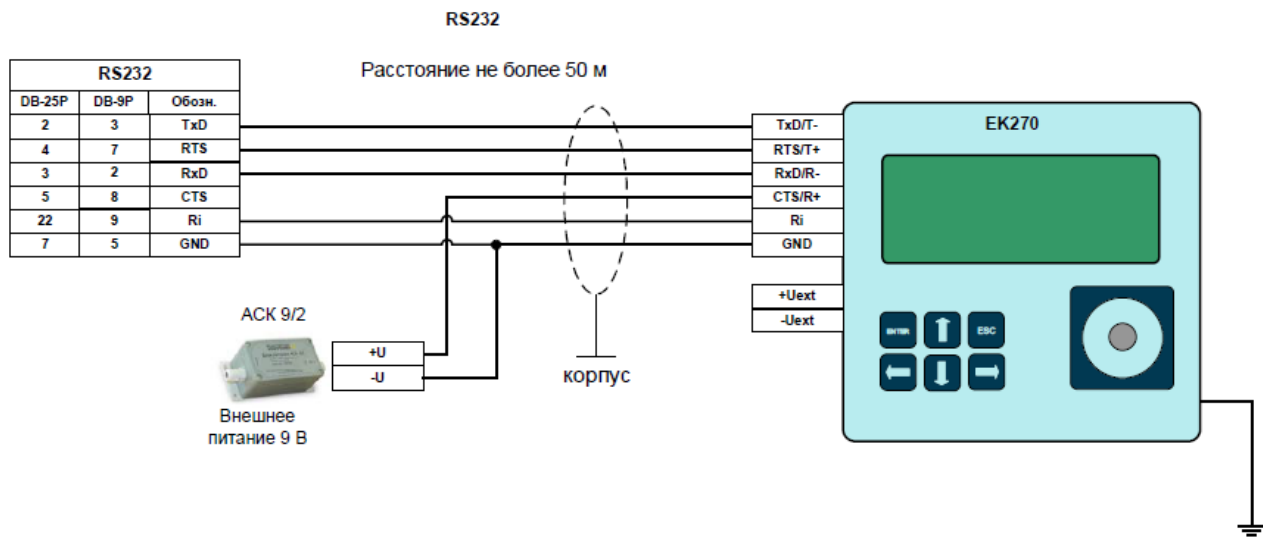

5.1.1.2

1.

2.

3.

P 2=7;
MT.S2=4;
2=2;
2=19200;
2=1;
2=0;
=1.


5.1.1.3

«

».


LIS200.

MC35i

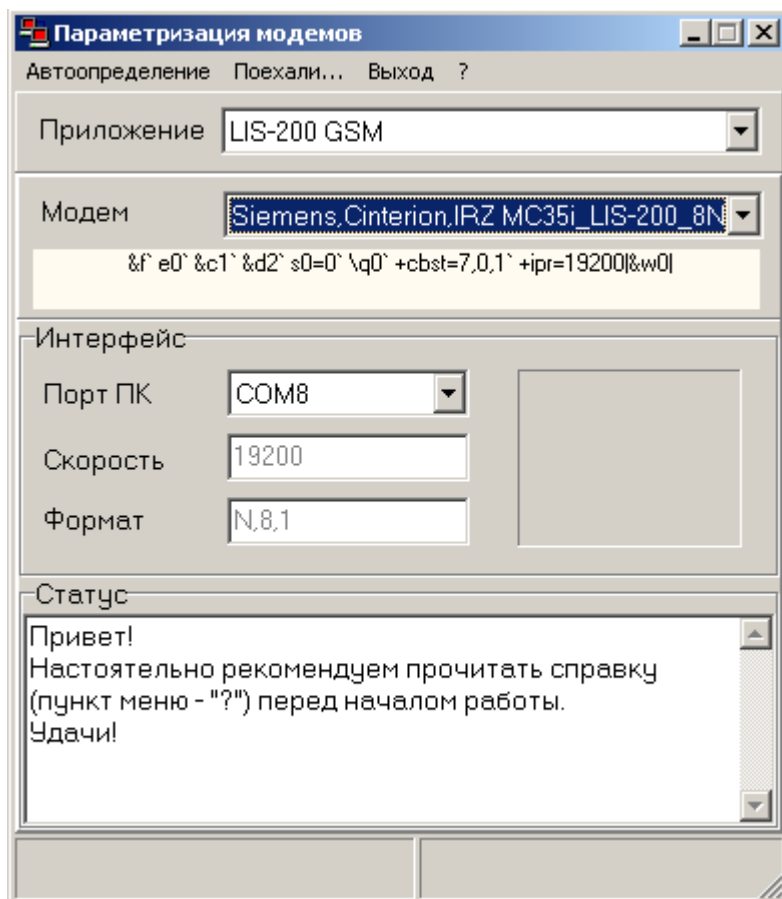

5.1.1.4

1. « »
2. «HyperTerminal»
3. (,)
4. SIEMENS

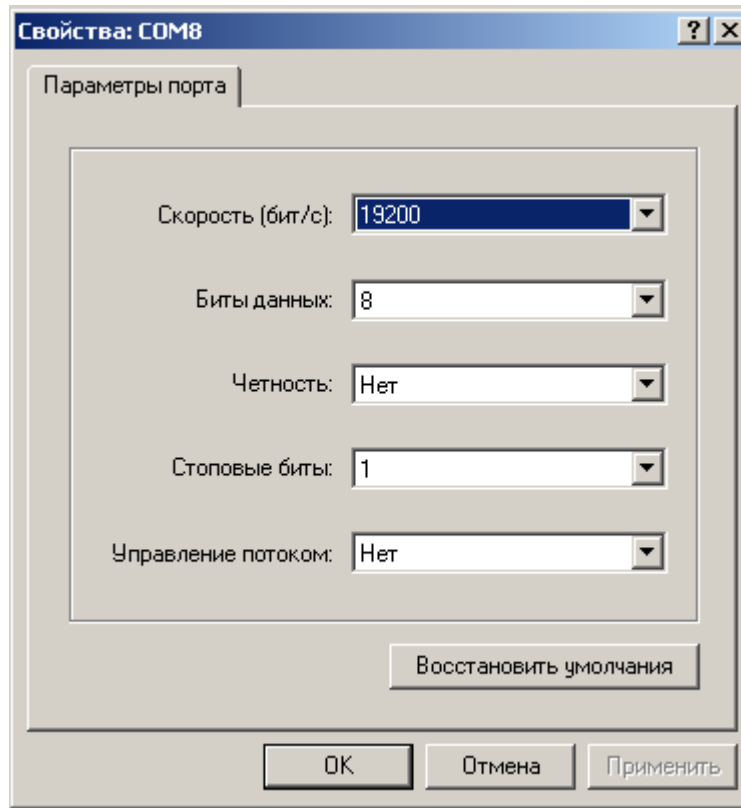

5. COM

6.

1

7. AT,


ATE0 OK;

ATQ0 OK;

AT+IPR= 19200 OK;

AT&W OK-

"

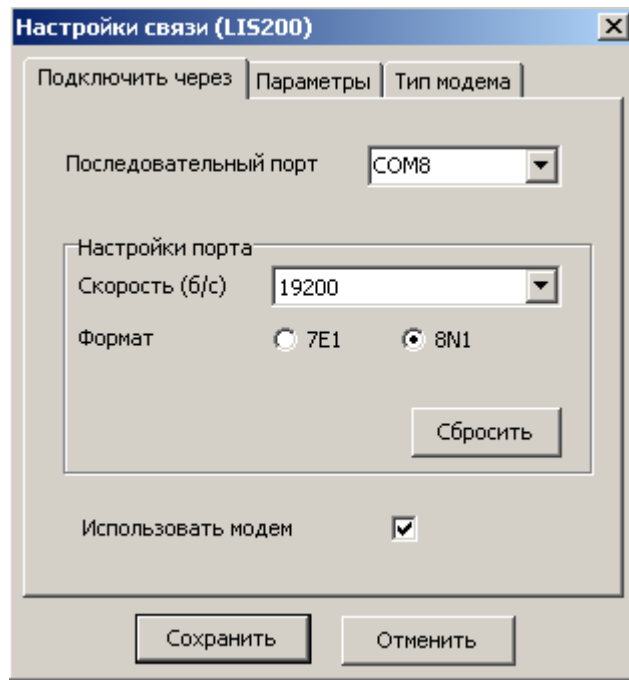

3.

- ;

- ;

- ;

- ;

- ;

4.

modem.ops,

..INI

, « ».

- ;

- ;

- ;

- ;

- ;


- DCD -

```

        DCD (
);
- DSR –
  DSR (
);
- CTS –
  CTS (
).
5.
[
].

```


Siemens

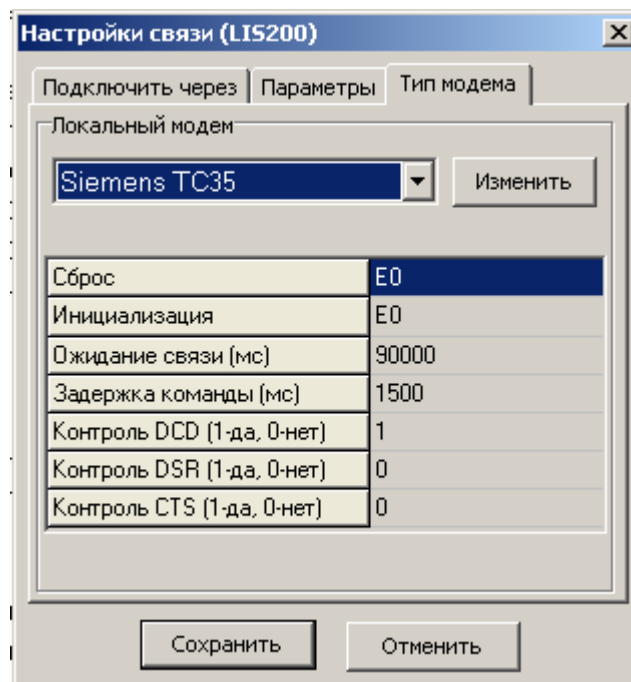

5.1.1.6

1.

>

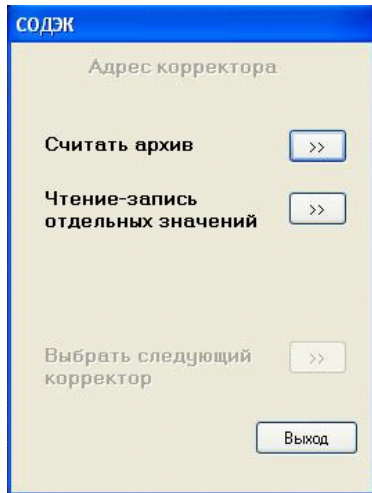

2.

3.

5.1.2

Wavecom

Wavecom


- (- Wavecom FASTRACK M1306B -(Sierra Wireless, Inc.
WAVECOM));
- (- Wavecom FASTRACK SUPREME-(Sierra Wireless, Inc.
WAVECOM));
- . - Fargo Maestro 100 -(Fargo Telecom Asia Ltd);
- (- FASTRACK XTEND FXT 009 (Sierra Wireless, Inc.
WAVECOM)).

5.1.2.1

EK270

RS232

Wavecom

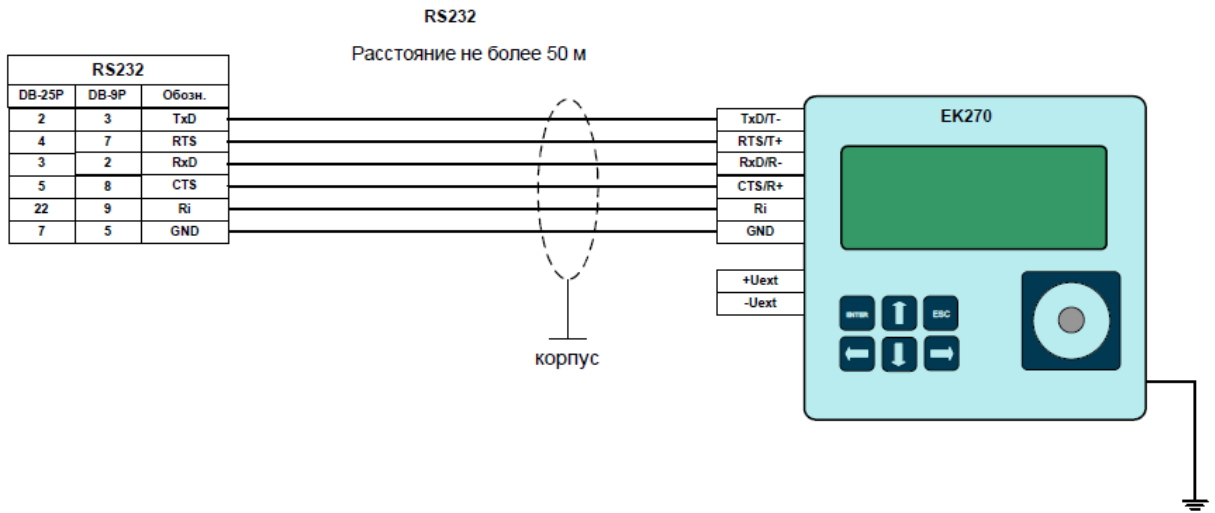

5.1.2.2

1.

2.

3.

```

P 2=7;
MT.S2=3;
 2=0;
 2=19200;
 2=1;
 2=0;
  =1.


```



5.1.2.3


« ».

LIS200

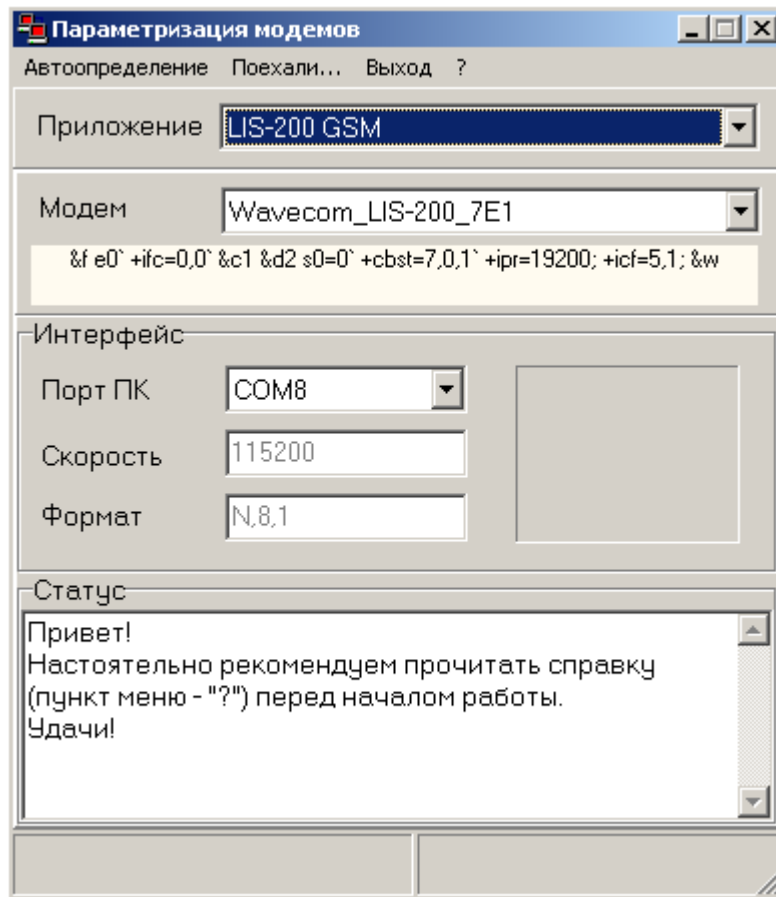

5.1.2.4

1. « »
2. «HyperTerminal»
3. (,)
4. Wavecom

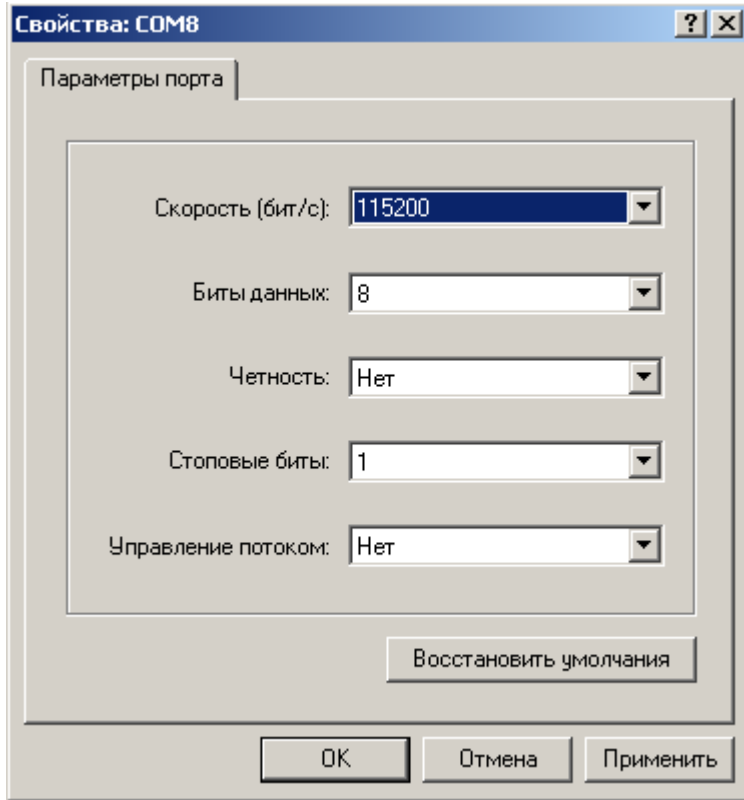

5. COM

6.

1

7. AT,

ATE0 OK;

ATQ0 OK;

AT+IPR= 19200 OK.

«HyperTerminal»

19200.


AT +ICF=5,1 OK.

«HyperTerminal»

7E1.

AT&W OK-

"

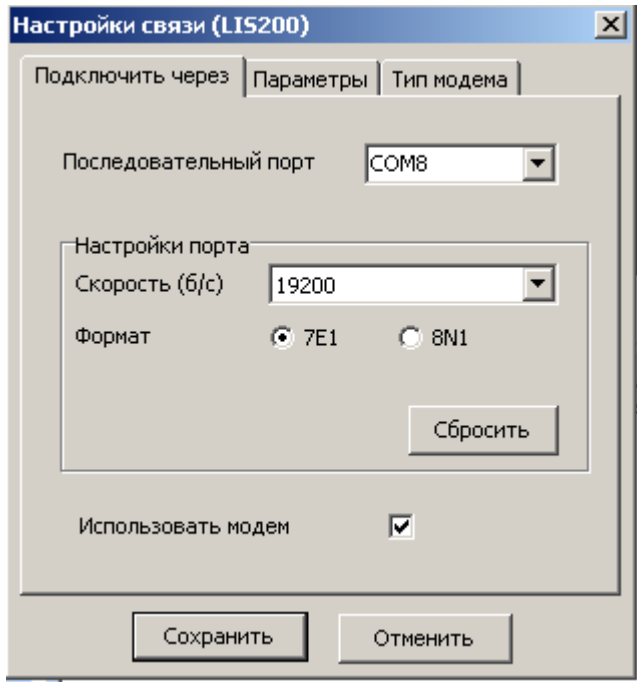

3.


- ;
- ;
- ;
- ;
- ;

4.

modem.ops,

..\\NI

- ;
- « ».
- ;
- - ;
- - ;
- - ;
- - ;
- - ;
- DCD -

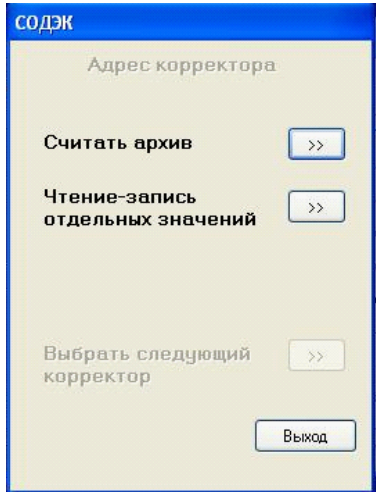

- 2. , \ ,
- 3. .

5.2

5.2.1

GSM - "TELEOFIS RX100-R COM GPRS"-
 , SMS GSM .
 COM ,
 260, 270.

DSR.

+IFC. RTS-CTS AT

:
 « RS232 (TX, RX, GND)


7 8 RS232

RTS-CTS

AT+IFC=0,0

5.2.1.1

GSM - "TELEOFIS RX100-R COM GPRS"

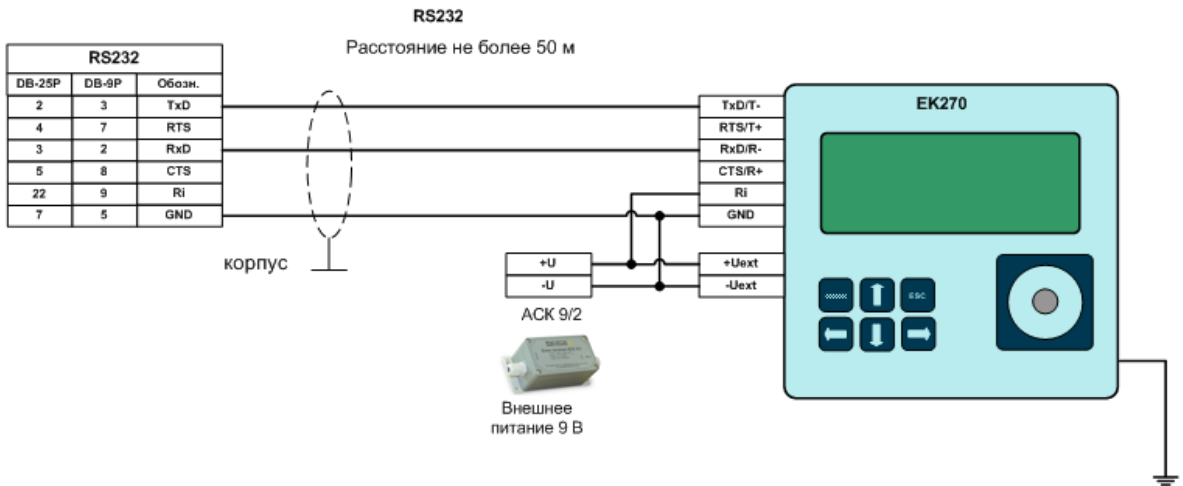

5.2.1.2

1.

2.

3.

```

P 2=5;
MT.S2- ;
 2=0;
 2=19200;
 2=1;
 2=0;
 =1.
    
```




5.2.1.3


1. « »

2. «HyperTerminal»

ASCII

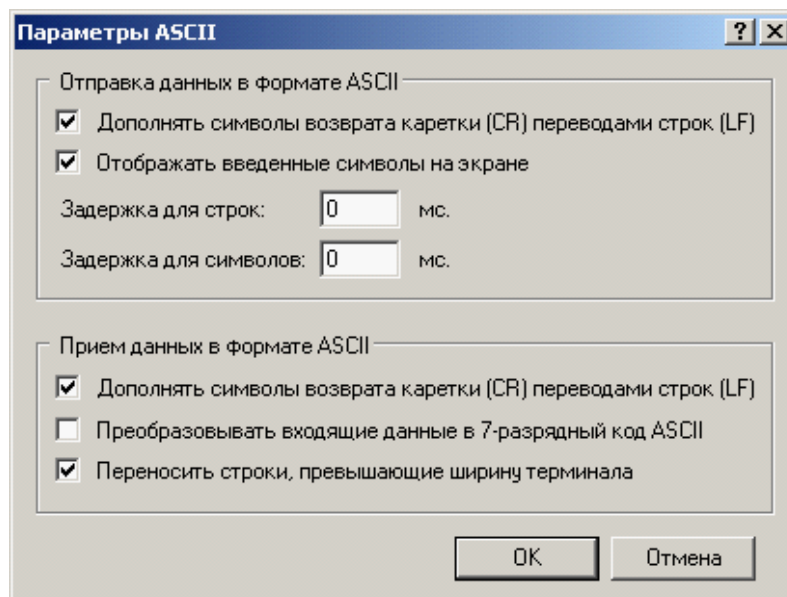


3. (,)
 4. , :

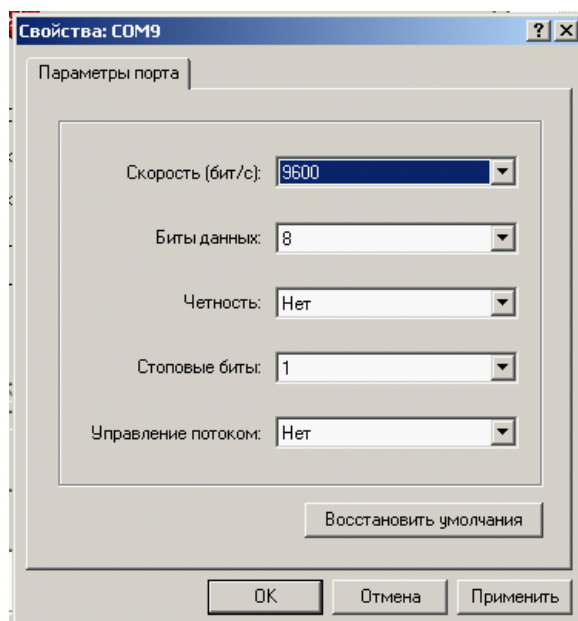

5. COM
 6. 1
 7. AT,


1. :
ATE0 OK;
ATQ0 OK;
ATS0=1 OK;
AT+IFC = 0,0 OK;
AT&C0 OK;
AT &D0 OK;
AT+CBST= 7,0,1 OK;
AT +ICF=5,1 OK;

«HyperTerminal»;

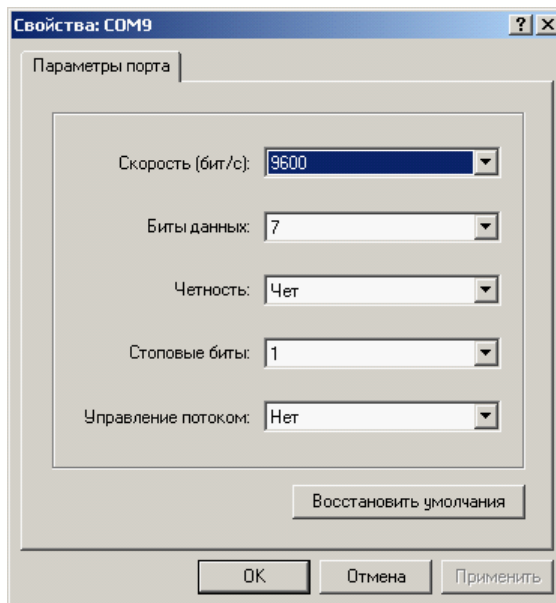

AT+IPR= 19200 OK;

«HyperTerminal»;

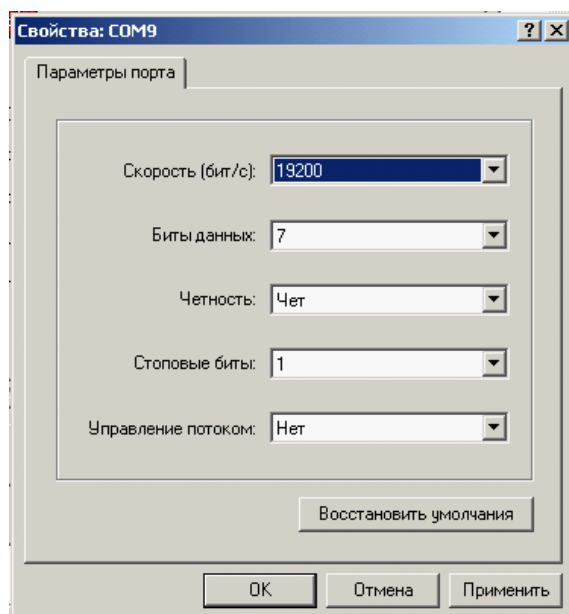

AT&W

OK –

AT&V

():

ACTIVE PROFILE:

E: 0-

;

L: 0;

M: 0;

Q: 0–

;

V: 1;

X: 4;

S0: 1 –

;

S2: 43;

S3: 13;

S4: 10;

S5: 8;

S6: 2;

S7: 60;

S8: 2;


S10: 15;
+CRC: 0;
+CR: 0;
+FCLASS: 0;
+IMODE: 0;
+DR: 0;
+CMGF: 0;
+CSDH: 0;
+ILRR: 0;
+CRLP: 61,61,128,6,0,3;
+CMEE: 1;
+CBST: 7,0,1;
+IFC: 0,0 – RTS-CTS ;
+ICF: 5,1 – 7 1 (, 8N1);
+CNMI: 2,1,0,0,0;
+CSTA: 129;
+CSCS: "IRA";
+IPR: 19200 – ;
+DS: 3,0,512,20;
&C: 0 – DCD ;
&D: 0 – DTR;
+CCWE: 0;
+CDTX: 0;
+CTZU: 0;
+CTZR: 0;
+CV120: 1,1,1,0,0,0;
+CEXTHS: 0;

+CEXTBUT: 0;
+CSMINS: 0;
+CMUX: 0;
+CCUG: 0,0,0;
+CLIP: 0;
+COLP: 0;
+CCWA: 0;
+CAOC: 1;
+CLIR: 0;
+CUSD: 0;
+CSSU: 0;
+CSSI: 0;
+CDIP: 0;
+CSCLK: 0;
+CIURC: 1;
+SCLASS0: 0;
+CSDT: 0;
+CMIC: 2,2;
+ECHO(NORMAL_AUDIO): 0,0,0;
+ECHO(AUX_AUDIO): 0,0,0;
+SIDET(NORMAL_AUDIO): 4096;
+SIDET(AUX_AUDIO): 4096;
+CLCAL: 1;
+CCPD: 1;
+CMTE: 1;
+CSCA: "+79104999104",145;
+CSMP: 17,167,0,0;


5.2.1.4

"TELEOFIS RX100-R COM GPRS"

1. « »
2. «HyperTerminal»
ASCII

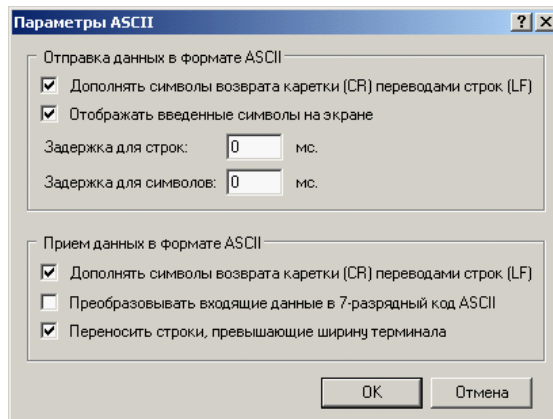

3. (,
4. ,

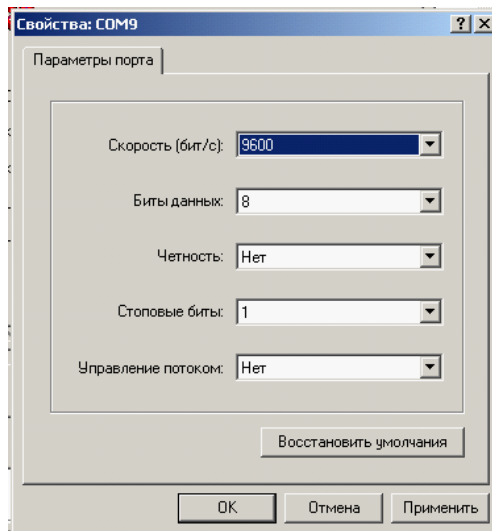

5. COM
6. 1

7. AT,

8.

ATE0 OK;

ATQ0 OK;

ATS0=1 OK;

AT+IFC = 0,0 OK;

AT&C0 OK;


AT &D0 OK;

AT+CBST= 7,0,1 OK;

AT +ICF=5,1 OK.

9.

«HyperTerminal»

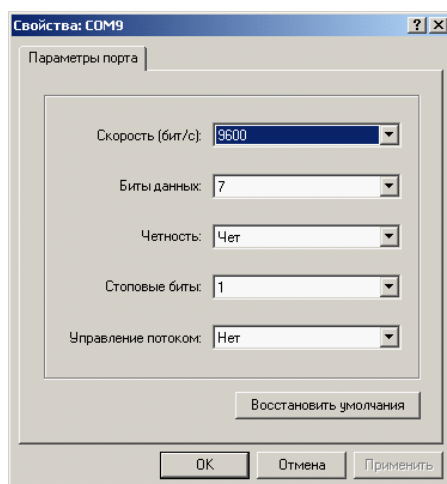


AT+IPR= 19200

OK.

10.

«HyperTerminal»

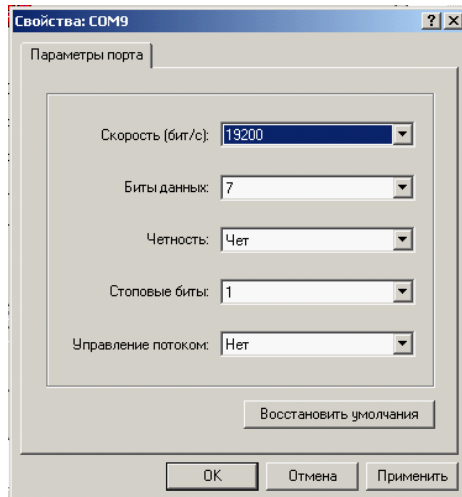


AT&W

OK–

5.2.1.5

1. " (" " - " ") .
2. - , :
- ;
- -19200;
- «7E1» (. . -7,
- , - -1);
- .

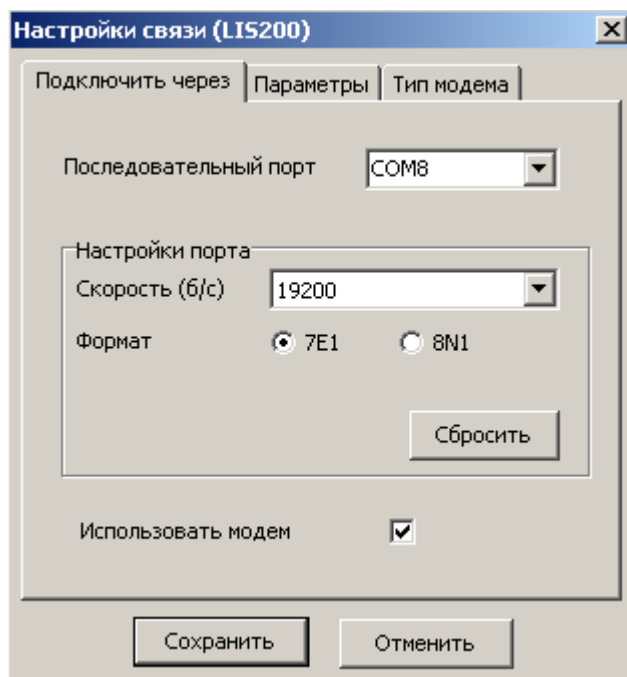

3.

```

- , ;
- - ;
- - ;
- , - ;
- - ;
- - , ;

```

4.

modem.ops,

..INI


```

- , « » ;
- - ;
- - ;
- - ;
- DCD - DCD( );
- DSR - DSR( );
- CTS - CTS( );

```


5.

[].

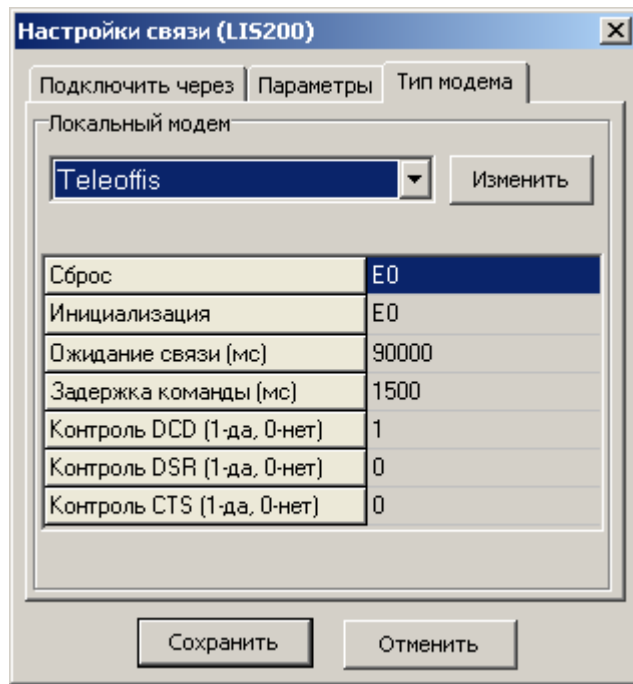

5.2.1.6

1.

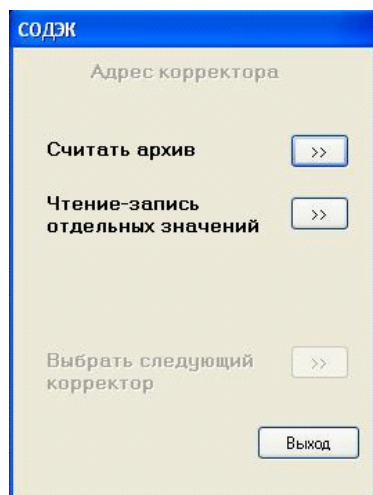

2.


3.

5.2.2 Siemens

Siemens
Siemens MC35i, Cinterion MC52i, IRZ MC52i, Cinterion MC35i.

5.2.2.1

EK270 RS232 (Siemens MC35i, Cinterion MC52i, IRZ MC52i, Cinterion MC35i)

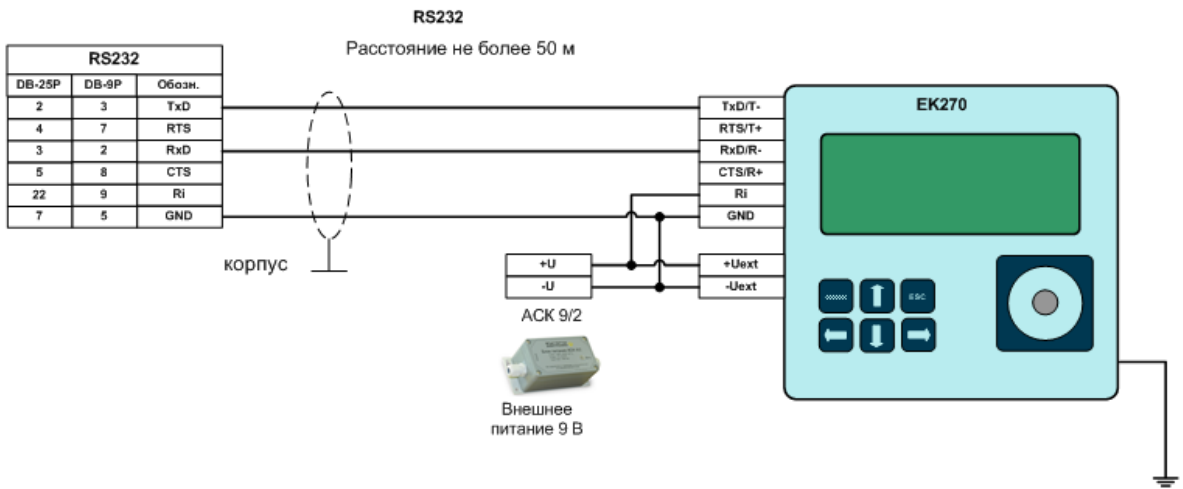


5.2.2.2

- 1.
 2. " " (← →).
 3. :
- P 2=5;
MT.S2=4;
2=2;
2=19200;
2=1;
2=0;
=1.

5.2.2.3

« ».
MC35i

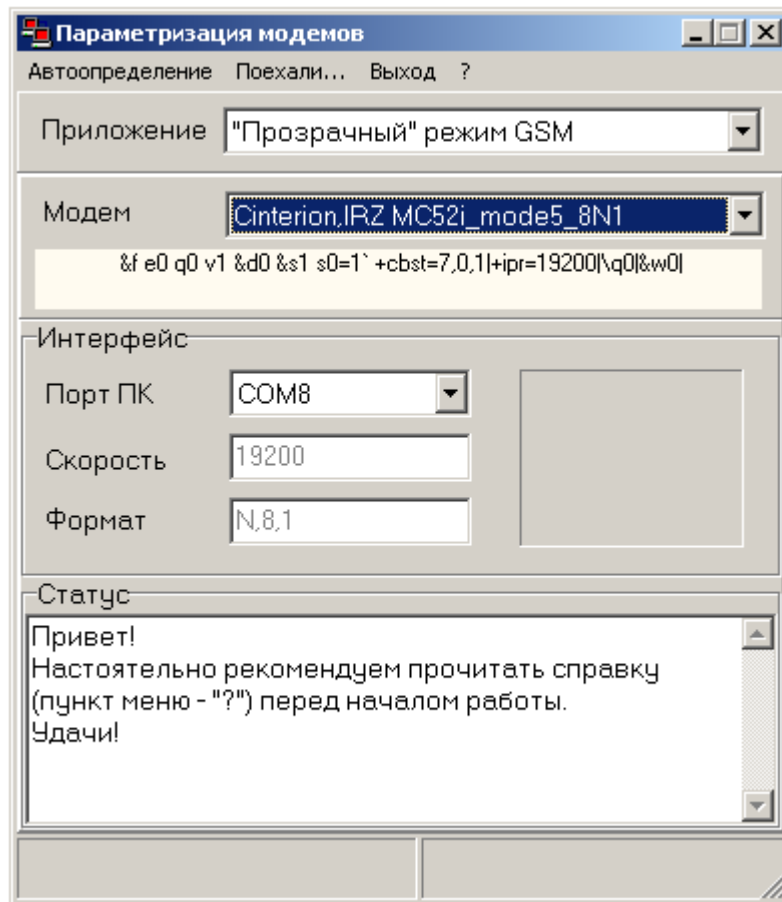

```

&F – ;
E 0 – ;
Q 0 – ;
ATV1 – - ;
&D 0 – DTR;
&S1 –
(DSR);
S0=1 – ;
+CBST= 7,0,1 – 9600 /
(V.32), ;
+IPR=19200 – ;
\Q0 – ;
&W0 –

```


5.2.2.4

1. « »
2. «HyperTerminal»

HyperTerminal".

3. (,)

4. SIEMENS

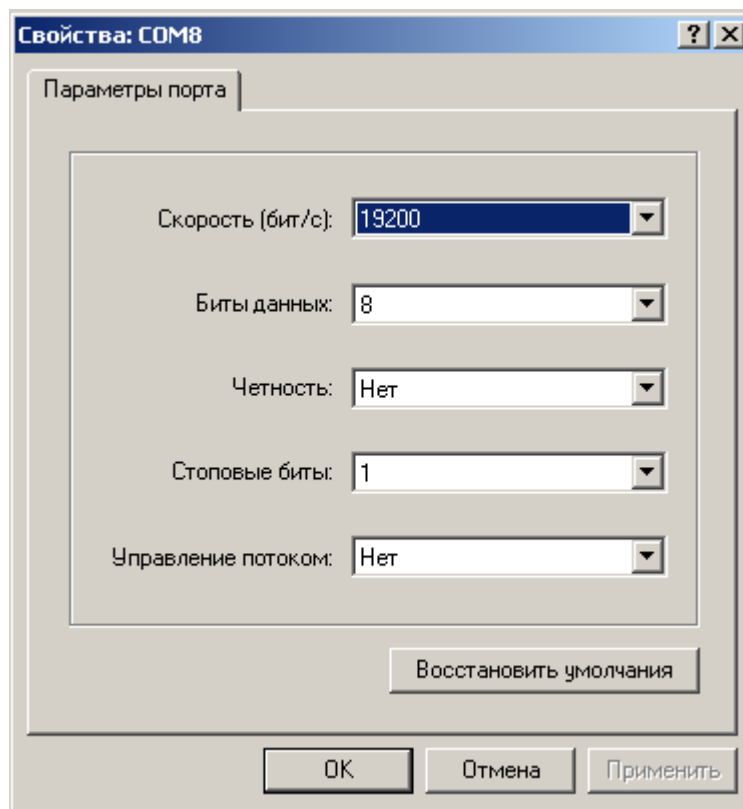

5. COM

6. 1

7. AT,

ATE0 OK;

ATQ0 OK;

AT+IPR= 19200 OK;

AT&W OK-

, « ».

:

- - ;

- - ;

- - ;

- - ;


- DCD - DCD();

- DSR - DSR ();

- CTS - CTS ().


5. [].

Siemens

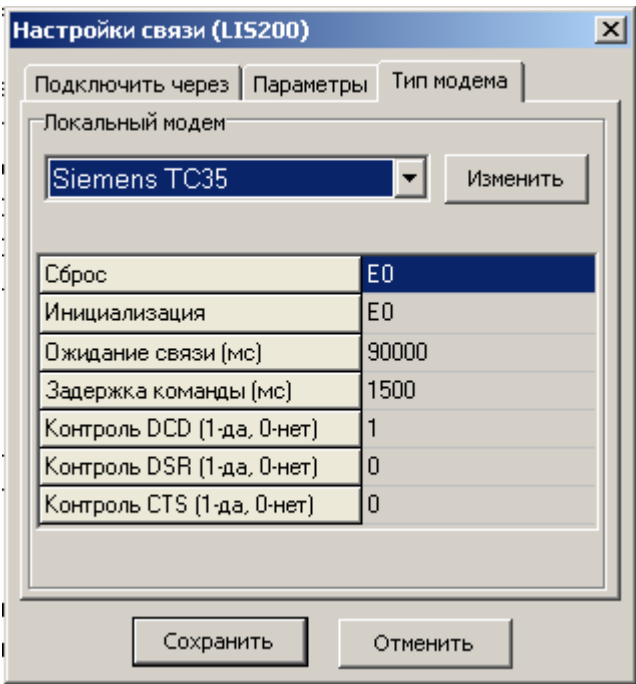

5.2.2.6

1.

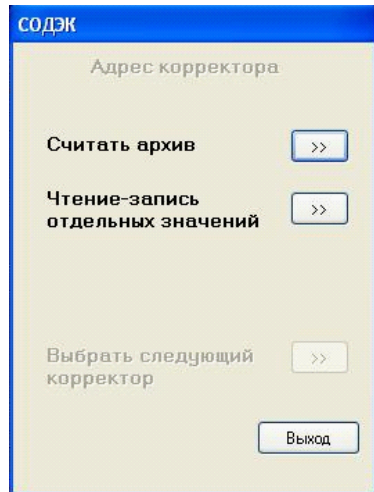

2.

3.

5.2.3

Wavecom

Wavecom


- Wavecom FASTRACK M1306B -(Sierra Wireless, Inc.)
- (WAVECOM));
- Wavecom FASTRACK SUPREME-(Sierra Wireless, Inc.)
- (WAVECOM));
- Fargo Maestro 100 -(Fargo Telecom Asia Ltd);
- . - FASTRACK XTEND FXT 009 (Sierra Wireless, Inc.)
- (WAVECOM)).

5.2.3.1

EK270

RS232

Wavecom

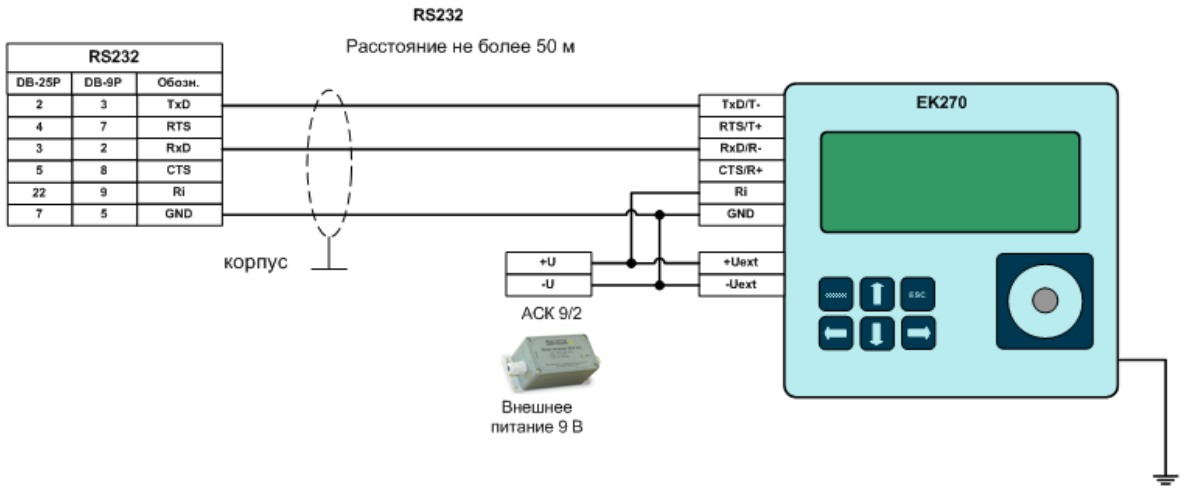

5.2.3.2

1.

2.

3.


P 2=5;
 MT.S2=3;
 2=0;
 2=19200;
 2=1;
 2=0;
 =1.



5.2.3.3


« ».

LIS200

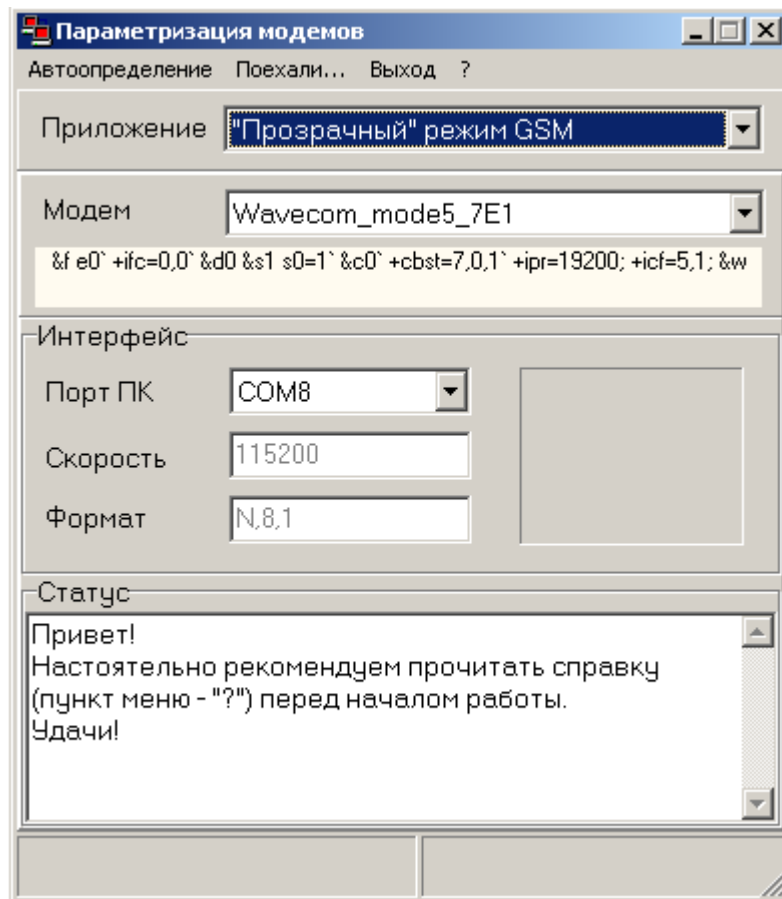

5.2.3.4

1. « »
2. «HyperTerminal»
3. (,)
4. Wavecom

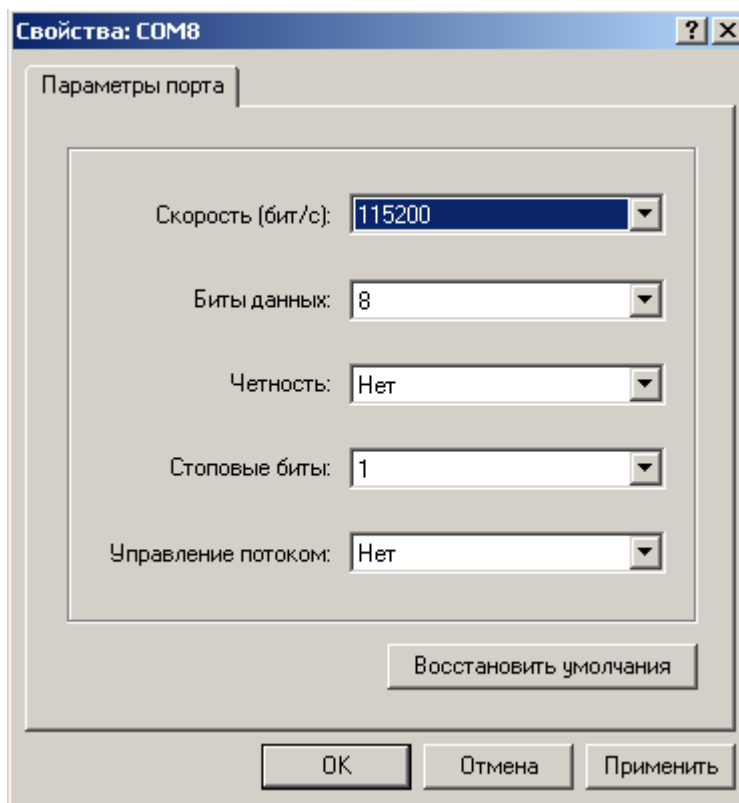

5. COM

6.

1

7. AT,

ATE0 OK;

ATQ0 OK;

AT+IPR= 19200 OK.

«HyperTerminal»

19200.


AT +ICF=5,1 OK.

«HyperTerminal»

7E1.

AT&W OK–


- ;
 - ;
 - ;
 - ;
 - DCD – DCD();
 - DSR – DSR();
 - CTS – CTS().
5. [].

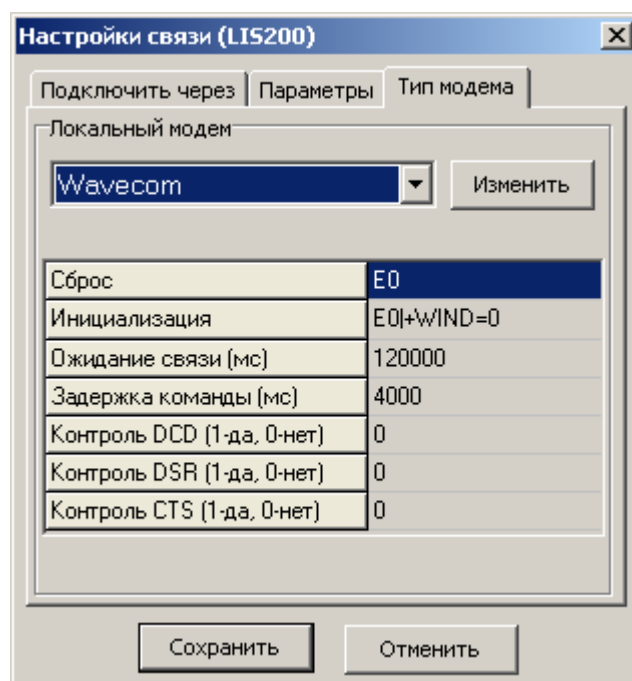

5.2.3.6

1.

>

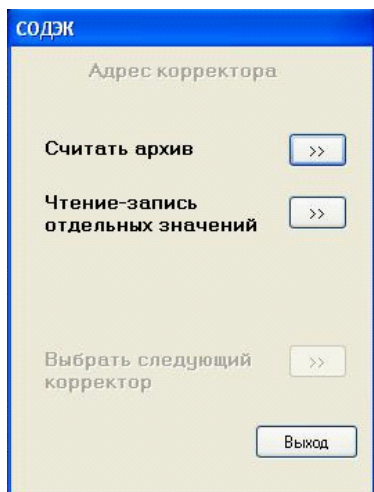

2.

3.